

## Classroom VPA 106

**Desktop Computer**

1<sup>st</sup> Turn on computer. (Computer is located in the lectern)

2<sup>nd</sup> Select the **ON** button (located on the lectern). “The screen will roll out and the data projector will turn on. There is a delay of 15 seconds before you see an image on the screen.”

3<sup>rd</sup> Select **PC1**

**Laptop Computer**

1<sup>st</sup> Turn on the laptop.

2<sup>nd</sup> Connect your laptop video cable to the Video port “label COMPUTER”. (located on the lectern.) Audio: Connect audio cable to the audio port. Audio port is next to the Video port.

3<sup>rd</sup> Select the **ON** button. “The screen will roll out and the data projector will turn on. There is a delay of 15 seconds before you see an image on the screen.”

4<sup>th</sup> Select PC1

\* If you don't get an image from your laptop, on your laptop keyboard press (**fn**) + (**CRT/LCD**). To get the desire look, repeat by pressing (**fn**) + (**CRT/LCD**) keys. The combo (**fn**) + (**CRT/LCD**) keys may vary with laptop manufactory.

**DVD/VHS**

1<sup>st</sup> Select the projector ON button. (located on the lectern) “The screen will roll out and the data projector will turn on. There is a delay of 15 seconds before you see an image on the screen.”

2<sup>nd</sup> Turn on the DVD/VHS. (located on the media rank) Put the media into the DVD/VHS device.

3<sup>rd</sup> Select Video 1 (located on the lectern)

**Note:**

**Make sure the Audio Power is on. This will power the audio system.**

Adjusting the sound volume button is located at the media rack “Outlaw device”.

Press button : Input + up/down to select your chooses

PC1: Video 1 | PC2 & iPod : Video 2

Image button will adjust the projector for improved image quality.

Select OFF button. This will turn off the data projector. (located on the lectern)