

# Media System Operation Guide

## Cosmetology Classroom

### Computer

- 1: Turn on the data projector. (The **ON** button is located on the remote control)
- 2: Turn on the computer.
3. Audio Enhancement Software is activated from IE icon which controls the camera. Icons: Projector and Ceiling Camera

### Laptop

- 1: Turn on the data projector. (The **ON** button is located on the remote control)
- 2: Connect a VGA cable to the laptop interface.

\* If you don't get an image from your laptop, "on your laptop keyboard" press **(fn) + (CRT/LCD)**. In most laptops pressing the fn + CNTL keys simultaneously toggles the display between laptop, projector, or laptop + projector.

### DVD

- 1: Turn on the data projector. (The **ON** button is located on the remote control)
- 2: Play DVD from the pc.

### VCR

WINTV icon on the desktop controls the vcr.

### Audio

Sound: The volume control knob is located on the tuner.

Data projector: To turn data projector off, select the **OFF** button located on the remote control.

Please call extension 6411 or email [helpdesk@sjeccd.edu](mailto:helpdesk@sjeccd.edu) for classroom orientation.

